


First ,you need to configure the device on offline status.

Select drive type and motor type

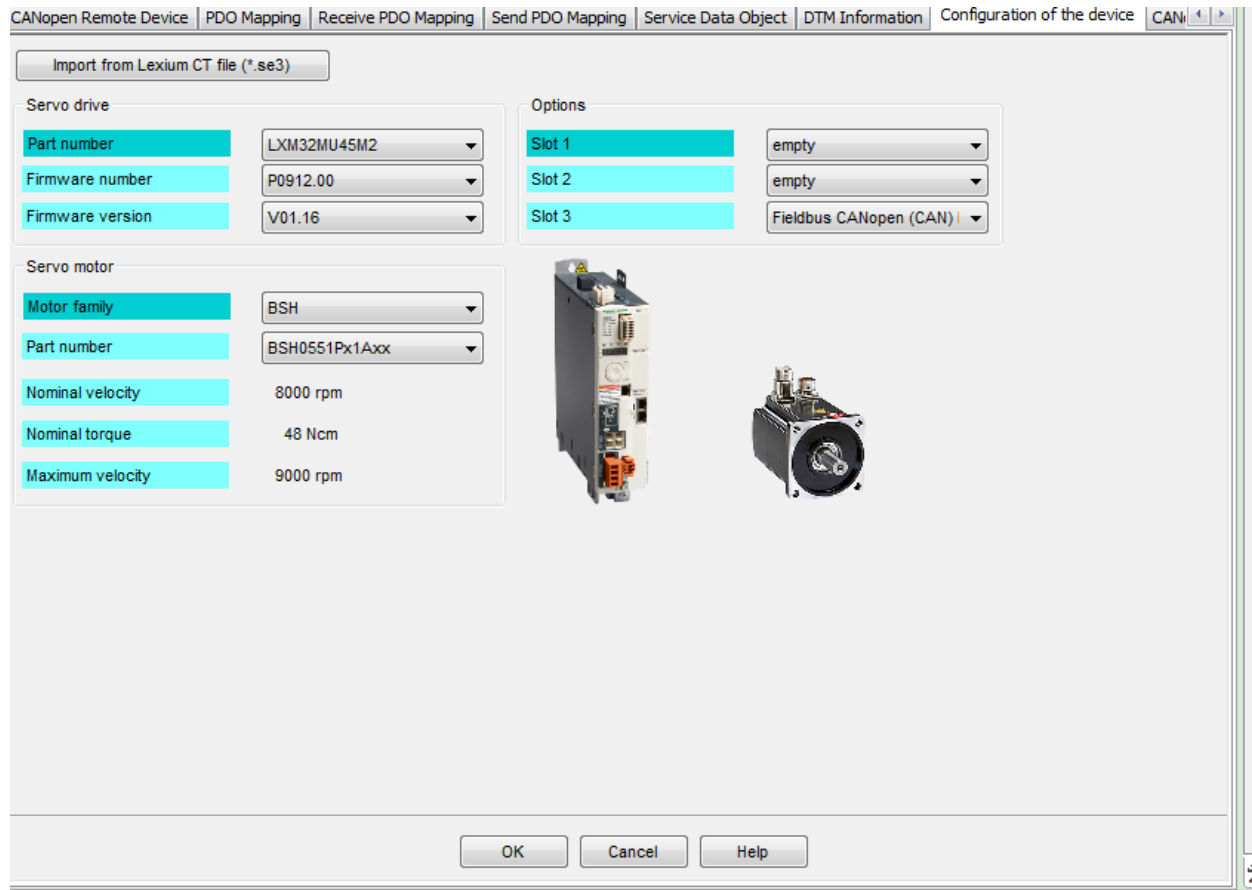

After correct configure the type. You can click the connection button on toolbar. The SoMachine will connect to Lexium 32M. The DTM interface is same as SoMove. You can change parameter、 auto tuning、 scope the trace ...

